



Parts List

L102BT	Blade Holder
L106N110	Squaring Arm
L112N	Stop Knob
L113NT	Support Arm x 2
L114N2	Shoulder Screw
L115	Bearing x 3
L116	Hinge Screw x 2
L118N	Hinge Block x 2
L124N	Board Feet x 6
L134	Squaring Arm Stop
L135NT	Handle Bar
L142N	Plunger Spring

L147N3	Plunger Pin
L207N2	Bearing Screw x 6
L211	Handle Bar Screw x 2
L216	Set Screw
L217N	Set Screw Slot
L242	E-Ring
L3110	End Cap x 2
L3304	Base Block
L3306	Trip Lever
L3307	Blade Cover
L3308	Blade Screw
L3309	Adjustment Screw
L3310	Adjustment Cam
L3311	Hold Up Arm

L3312	Release Housing
L3313	Pull Handle
L3314	Blade Plate
L3315N	Lifter Knob
L3316	Lifter Wheel
L3318T40	Cutting Bar
L3319N	Screw x 3
L3325I	Squaring Arm Scale-Inch
L3325M	Squaring Arm Scale-Metric
L3327	Screw x 2
L3331	Trip Lever Spring
L616	Squaring Arm Screw x 2
L757TN2	Board
L935N	Screw x 2

